


INSTALLATION INSTRUCTIONS


Troldtekt® acoustic panels and Troldtekt® Plus Installed in exposed T35 profiles in removable, suspended ceiling system

These instructions apply to installation of Troldtekt® acoustic panels and Troldtekt® Plus in exposed T35 profiles in removable, exposed ceiling system.
Download installation instructions for Troldtekt® T35 profile system from www.troldtekt.com.


PROFILE DRAWINGS

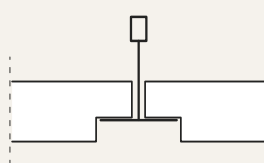


K0-FS: With rebate for exposed T-profile

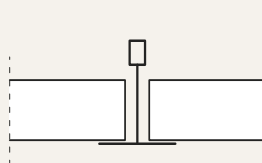


K0-S: Square edge for exposed T-profile

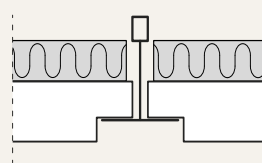


K0-FS:
Troldtekt akustik Plus

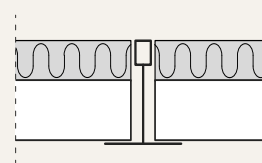

K0-S:
Troldtekt akustik Plus

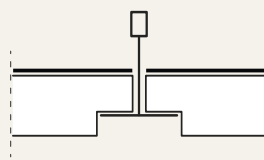

K0-FS:
Troldtekt Plus 25 & 35

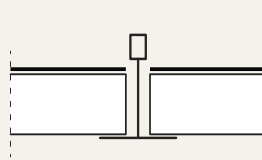

K0-S:
Troldtekt Plus 15, 25 & 35


INSTALLATION

Check that all hangers are secure after installation of the profile system. Adjust if necessary. Now lay the Troldtekt panels in the grid.

Note: When installing **600 × 600 mm** square panels, it is important to ensure that the wood wool fibres run mainly parallel in one

direction. To ensure a uniform appearance, install the panels so that the printed Troldtekt texts on the back of the panels all run in the

ILLUSTRATION – INSTALLATION

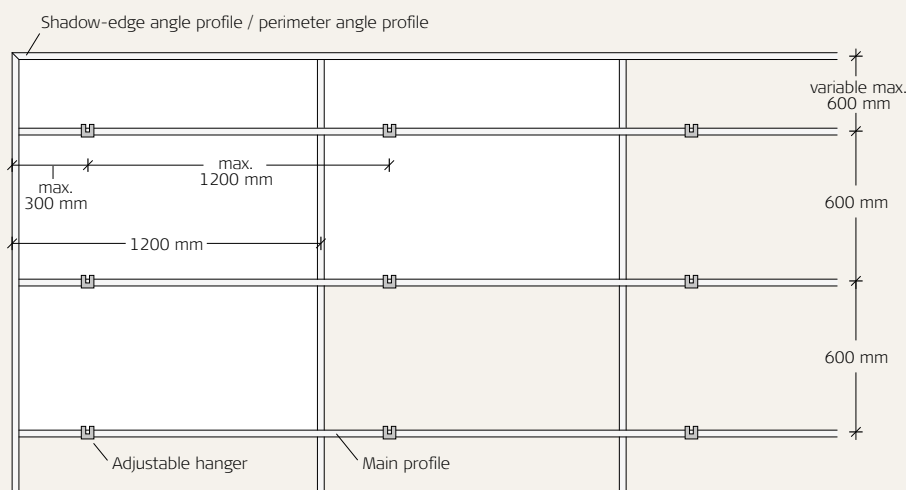

This document reflects Troldtekt's knowledge of certifications, standards, and products at the time of publication.
No rights can be derived from this document.
Changes, typesetting and printing errors reserved.

The most recent version can be found online by scanning the QR code.

MAY 2025 UK IE V01

Troldtekt Limited
Pembroke
Leominster

Herefordshire
HR6 9LA
United Kingdom

Tel +44 7555 176055
sales@troldtekt.co.uk

www.troldtekt.co.uk